

 
Smart Lock



TTLOCK

User Manual

K6B-YB

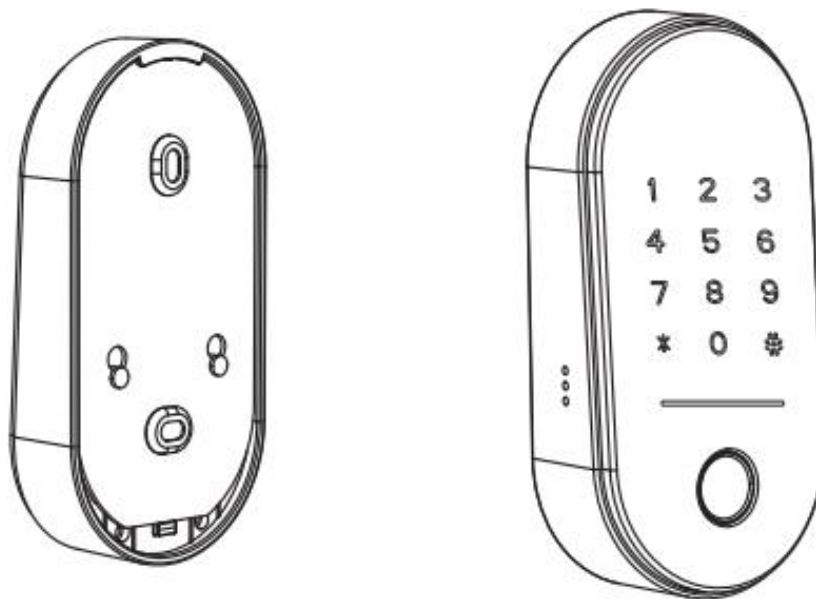


Special Attention:

1. Please replace for the battery when low wattage alarm.
2. Reading this manual carefully before installation, and keep it for future reference.

1. Introduction

 1.1.Lock structure

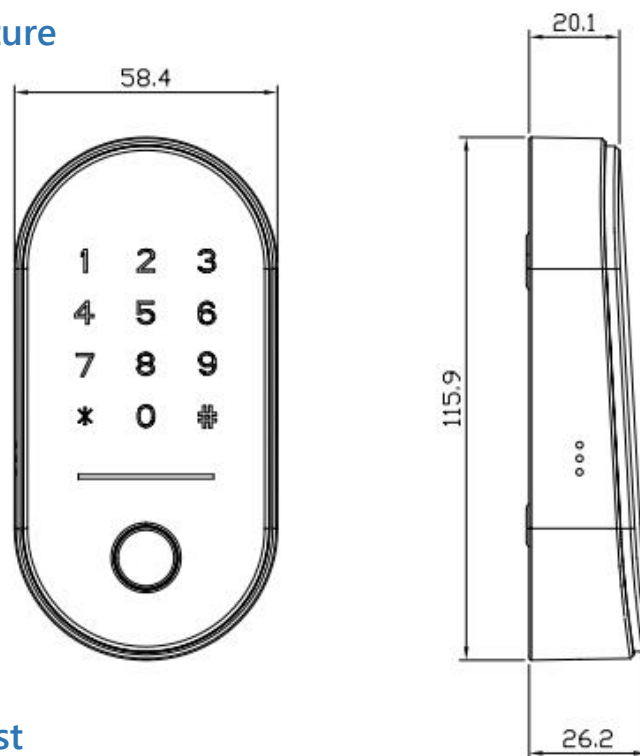

1.2.Packing List



Check the following drawing to check whether the package contains all the parts

NO	Name	Qty	NO	Name	Qty
1	Front Pane	1	2	Card	3
3	User Manual	1	4	Screw KA4*25	2
5	expansion screw Ø6*30	2	6	SIM card ejector	1


1.3.Specifications

Suitable for Models	K6B-YB	Doors Applicable	Aluminum door Wooden door
Materials	plastics	Working Voltage	1*CR123A
Lock Weight	0.3KG	Door Thickness to Fit	ALL
Unlocking Way	Bluetooth Password Card Gateway(option)	Data Capacity	Fingerprint: 50 Password: 50 Card: 50

Color	Black	Working Temperature	-10°C-55°C
Low Wattage Alarm	Less than 4.8V	Working Humidity	0-95%

System Initialization

 
Open the panel and battery cover, release the battery first, long press the "Pick-proof" button on the back panel, insert the battery to power on and hold for 5 seconds, release the button, the light belt flashes, and enter 123456#, initialization is complete.

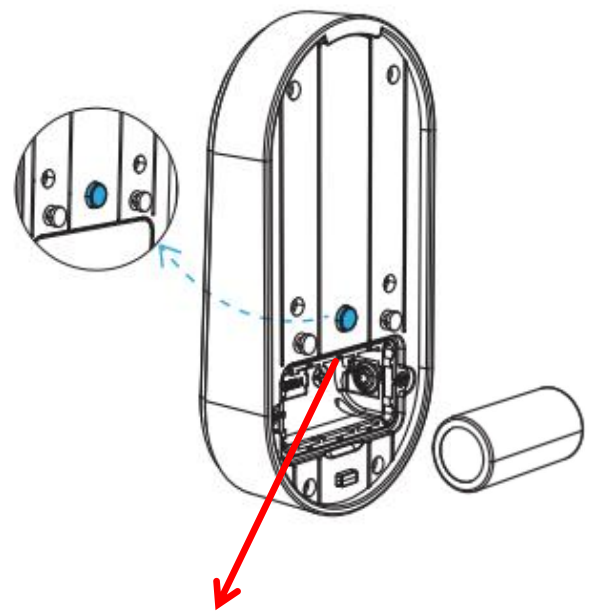

Pick-proof button


2.Installation

 Step 1 Take down the panel

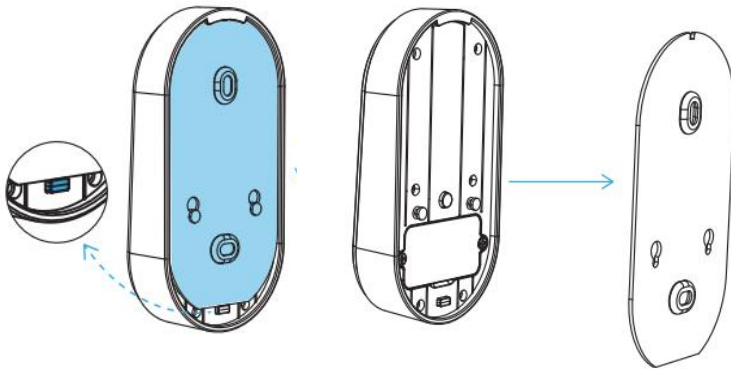


Press the button like the picture, and slide the panel.

 Step 2 Install the battery

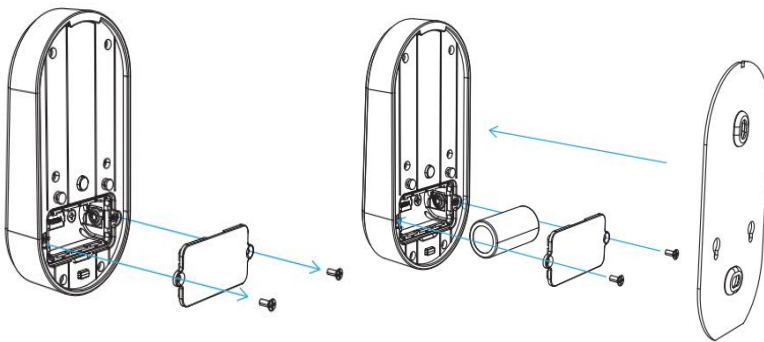

1. Loose the screw
2. Insert the battery and tighten the screw

 Step 3 Install panel and complete

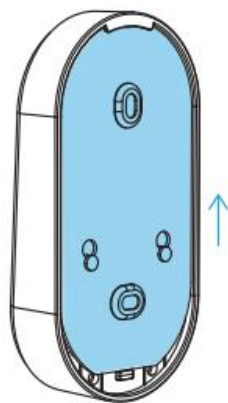

Press and slide up the panel. Install complete

 
3. Operation

3.1.Download

You can search for [Smart life] in various app stores or scan the QR code above to download.



3.2.Register

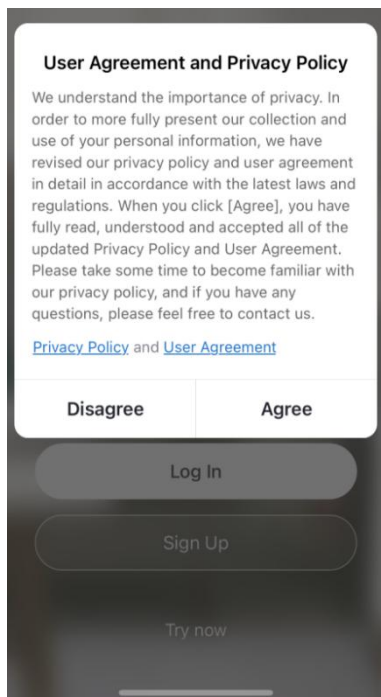

- 1.Click "Sign Up"and read the Privacy Policy after it pops up. Click "Agree" and enter the registration page.
- 2.You can use email or mobile number as your account to register. The country/region of the APP will be the same as the phone's. You can also change it by yourself when registering. (You cannot change the country/region after the registration). Enter mobile number/email and click"Get Verification Code";
- 3.Enter the verification code and turn to the password setting page. Set your password as required and click "Done".

3.3.Log in

If you already have an account,choose "Register with Existing Account"and enter the log in page.

- 1) .The system will automatically locate the current country/region you are in. Or you can choose the country/region by yourself.
- 2) .Enter mobile number/ email and password.
 - Thirty-party Social Account Log in

If you have downloaded Wechat or QQ on your phone, you can click the Wechat/QQ icon in the log in page. You can log in using your wechat/QQ account after authorizing it.If you are using iPhone,you can also log in with Apple ID.

 
3.4.Add lock

1.Tap Add Device on the Home page or "+" in the upper right corner of the page to go to the Add Device page. then, you can manually add devices or search for devices to add to the app.

2.Click on the "security sensors" category on the left, Find the door lock (Bluetooth)



3.The lock needs to be added by the app after entering the add mode. Generally, a lock that has not been added, as long as the lock keyboard is touched, it will enter the add mode.

4.After searching for the door lock, click to add

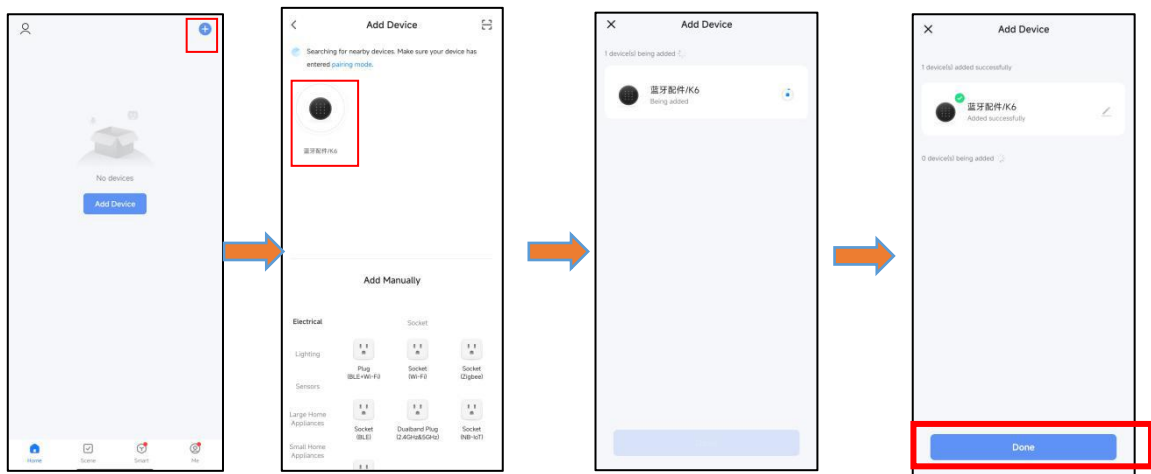


4.Setting Guide

  
4.1 First click Add lock end and accessories

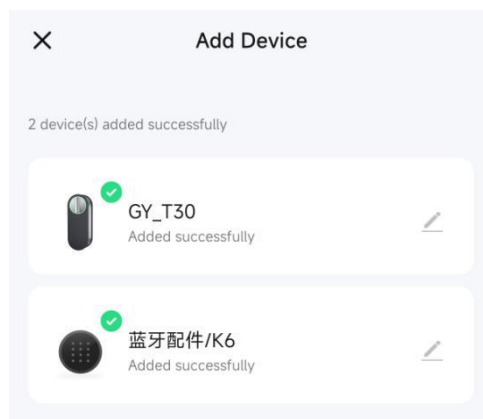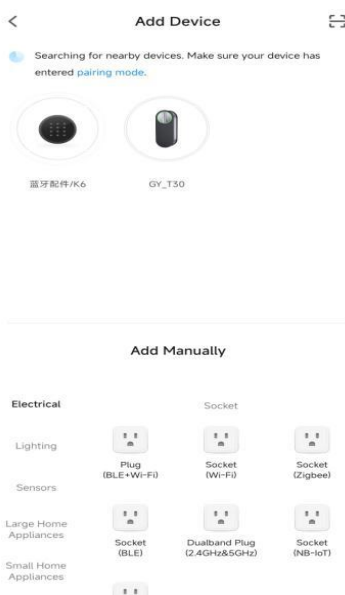

 
4.2. Add the Bluetooth key on the Bluetooth Accessories page, click '+', select the permanent Bluetooth key, select the associated member, and add the Bluetooth key successfully if there is a Bluetooth key under the unlocking mode.

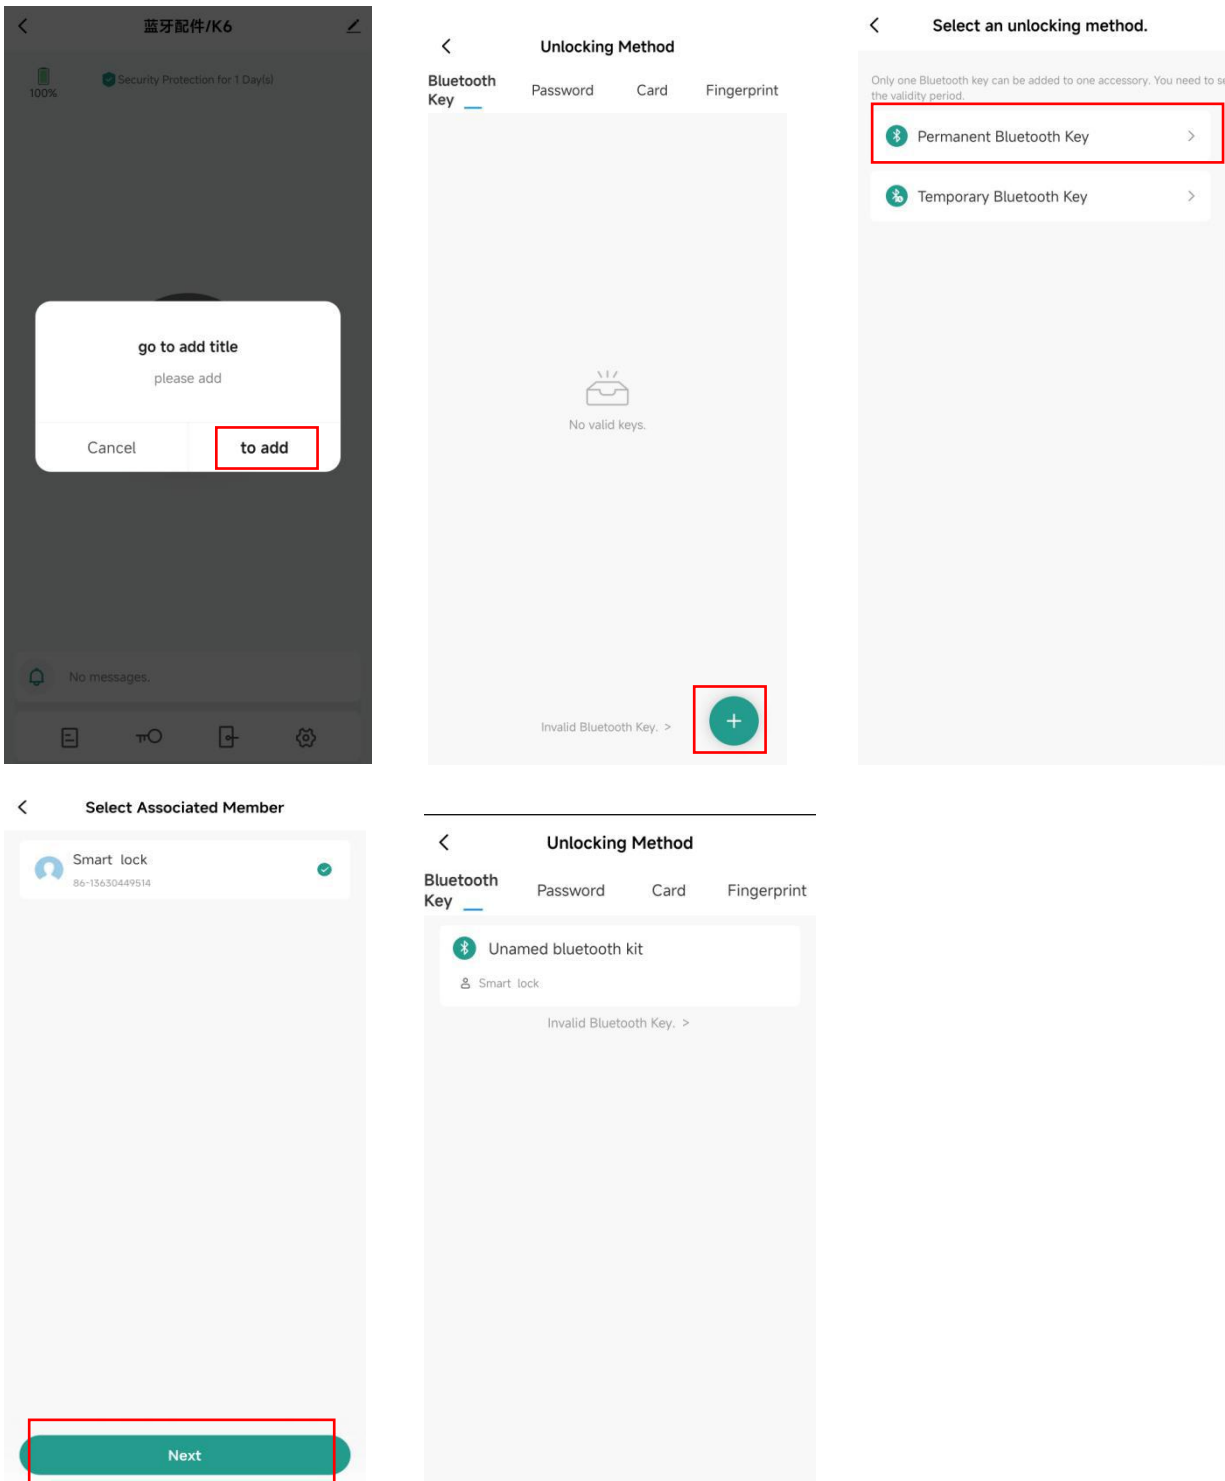

 4.3. On the Bluetooth accessories page, click Add, select the door lock to be bound, and the binding is successful.

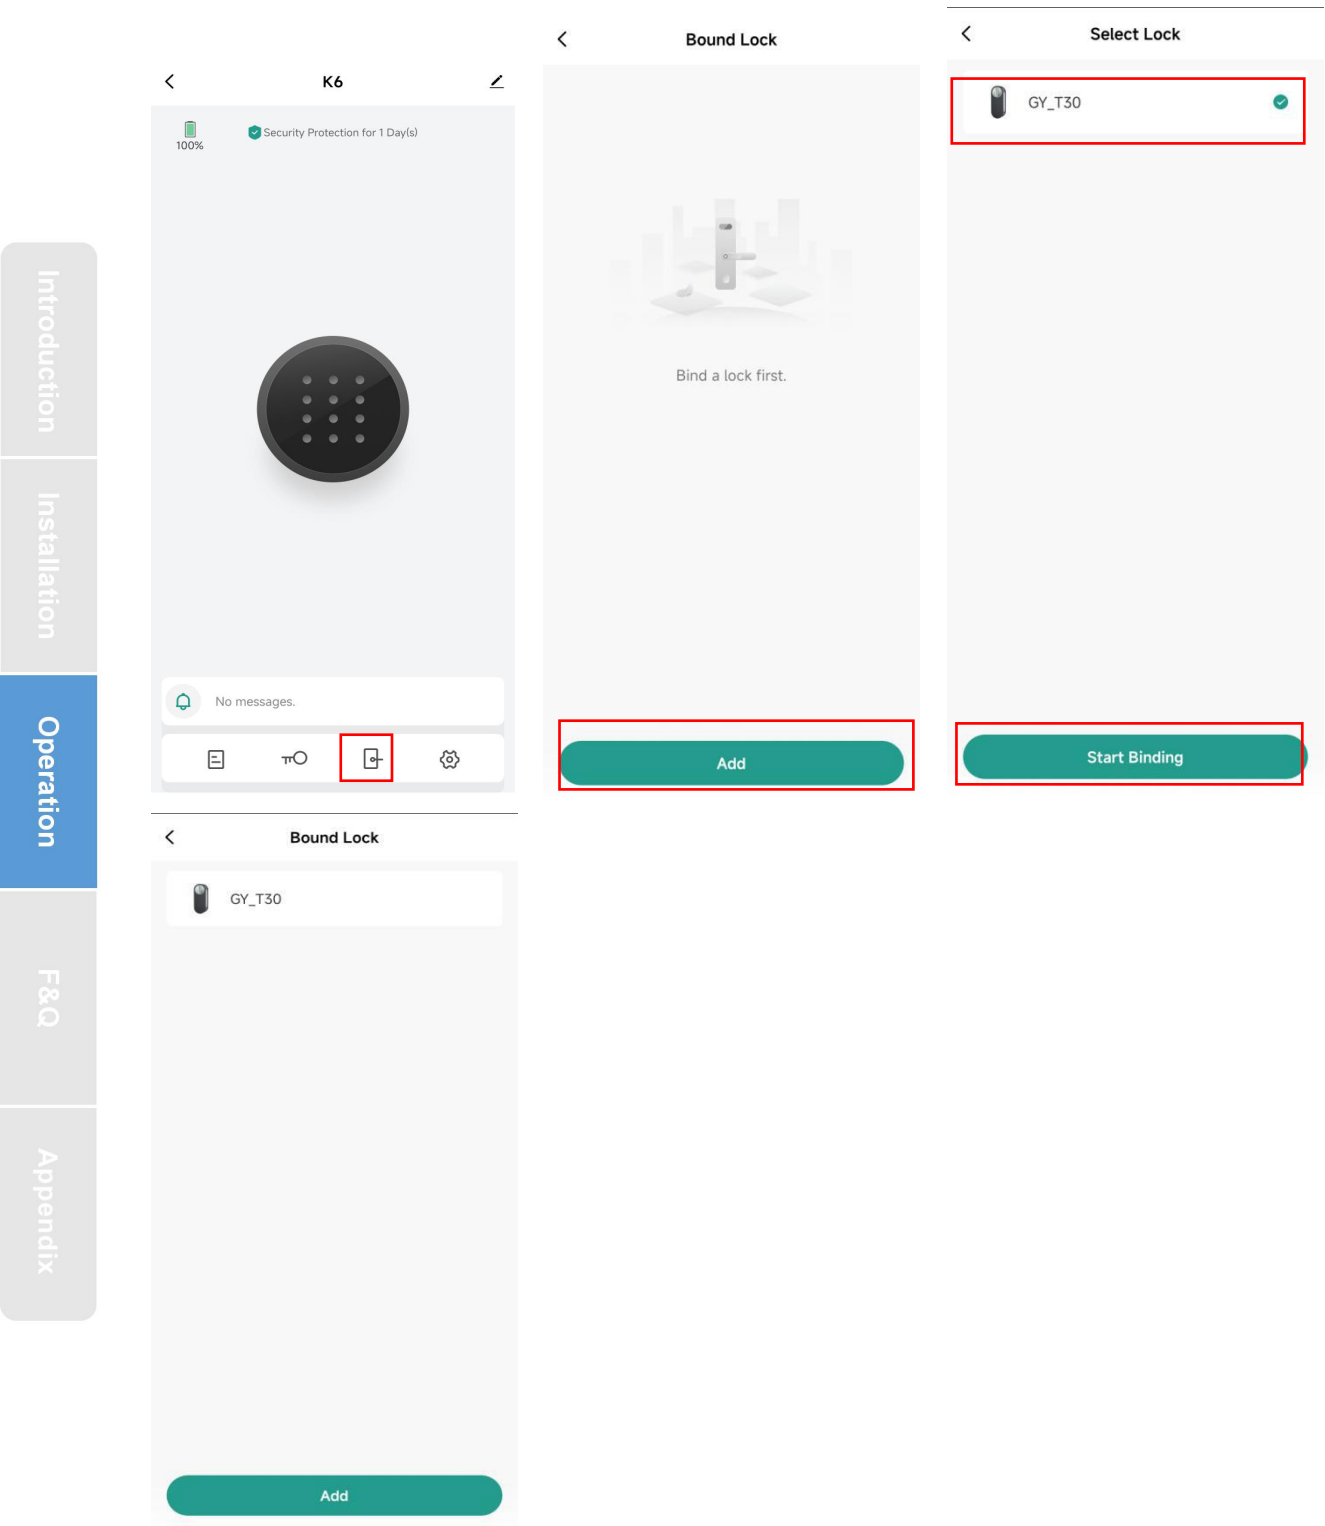

 4.4. Add a fingerprint in the Bluetooth accessory, select the door lock to be associated, and then select the member to be associated, enter the fingerprint to be added, and add the key card/password method is the same.

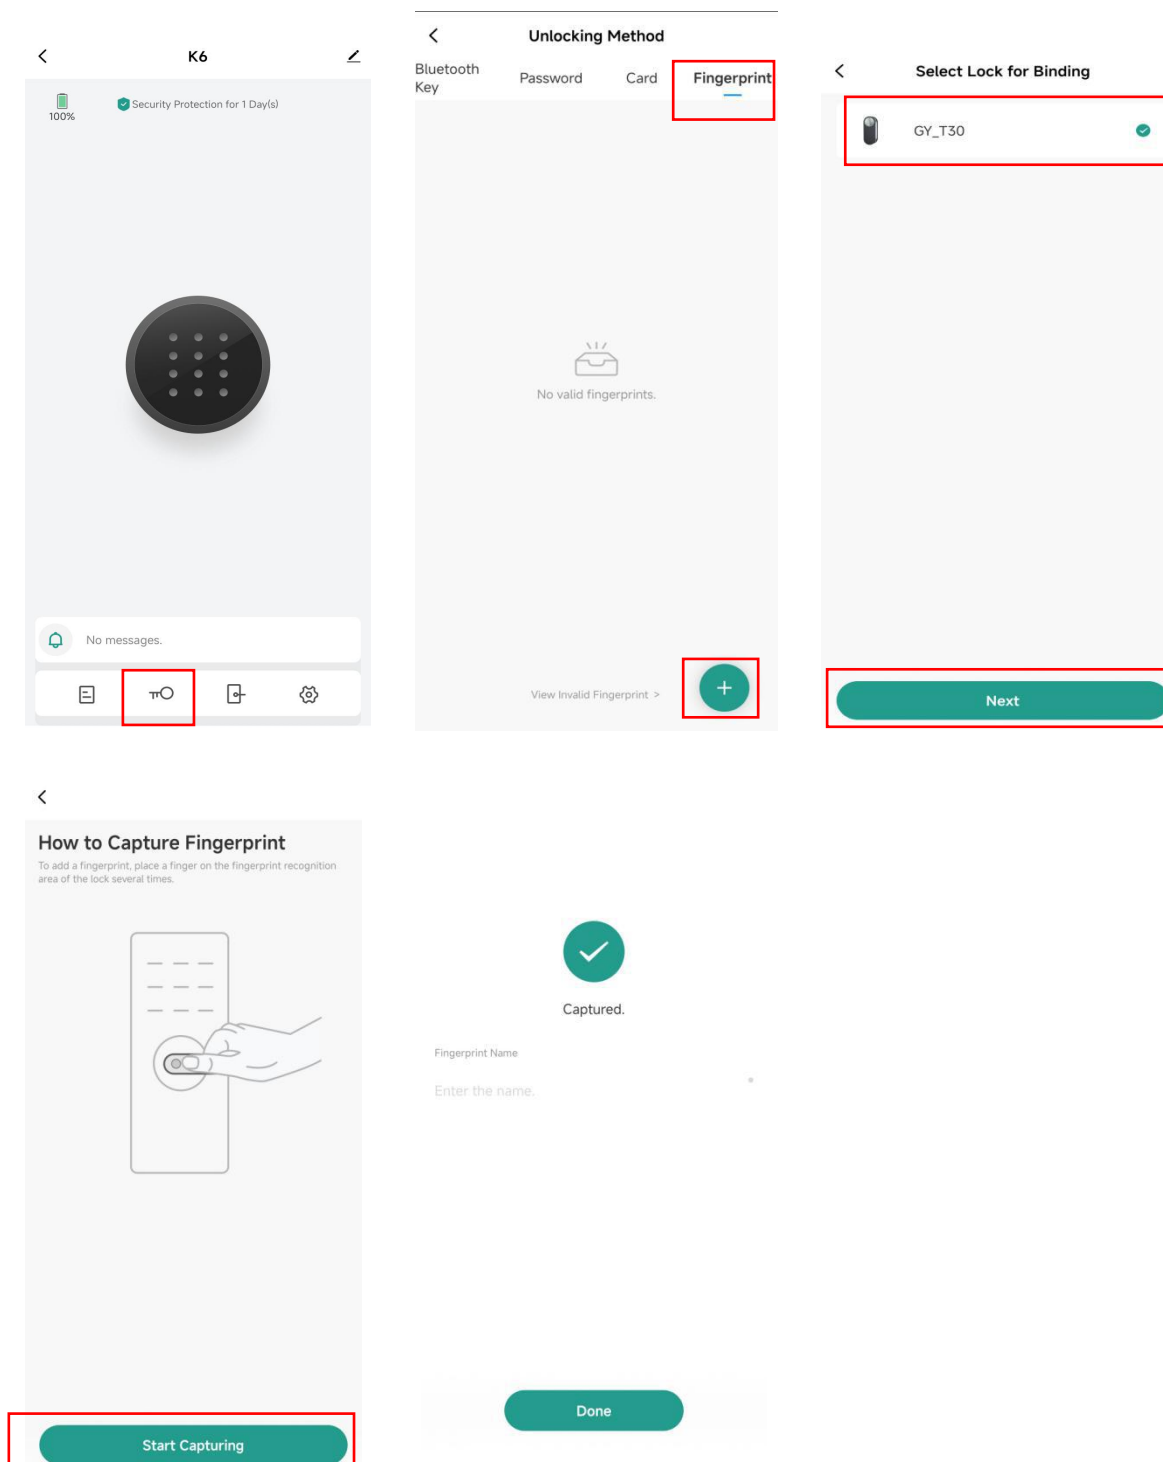

4.5. Disconnect the Bluetooth, and use the entered fingerprint/password/card to unlock.

4.FAQ

Introduction Installation Operation F&Q Appendix	1) How to read operation records?	In the Records of the main interface. .
	2) Why can't I unlock it after open the passage mode	You need to perform an unlock verification in any method, than the passage mode will take effect.
	3) What is the purpose of Auto Lock	You can set how long to lock after unlocking
	4) After installation, touch sensing keyboard, screen no respond	a) In this case, first check that the positive and negative electrodes of the battery have been installed upside down, whether the battery has enough power b) Remove the back panel and see if it's connected. c) To eliminate the above situation, you need to remove the lock ,check whether the wires of the lock body are squeezed, and the re-wire.
	5) Unable to register fingerprint	Check the fingers for dirt or wear, check the fingerprint head on the lock for dirt and oil stains, etc. Check to see if the fingerprint is working properly(Press to see if there is any responds.
	6) What is the reason why the smart lock consumes fast power?	a) Large standby power consumption b) Short circuit
	7) There is no response to pressing the handle on outside the door, and there is unlock normally on inside the door, but the verification is normal, and the motor is normal.	It may be the triangle direction on the clutch was error, please check correction.
	8) How many times will the password be locked? How long is it locked?	Enter the wrong password more than 5 times in a row, the keyboard is locked for 5 minus, Other ways to can open the door

Guarantee

Customer Name: _____

Customer Calls : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- ① Please keep this card so that you can use it when you need warranty service.
- ② We provide you with a one-year warranty from the date of purchase.
- ③ This warranty service is valid for customers in any country in the world.